## **Visual Stop Settings**


When cutting multi-angle mats you will be making individual cuts and opposite pairs of cuts. The stops are set by aligning guide marks on the pressure foot with a penciled layout of the desired mat opening. The guide marks must be added to the pressure foot using a fine point permanent marker.

## **Marking the Pressure Foot**

1) Cut the right, bottom, and left borders of a rectangle mat. Leave the stops as set for this mat. Lower the foot against the mat in position for the bottom cut. Add guide marks to the pressure foot as follows:




 Position the knife head in the middle of the bottom cut. Make a border setting mark on the left side of the foot.

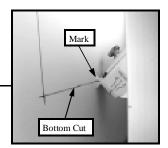

3) Make a border setting mark on the right side of the foot.



4. Move the head right to the start of the bottom cut. Make a starting mark on the front recess of the foot.

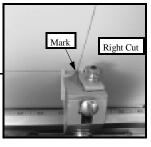

5) Move the head left to the end of the bottom cut. Make an ending mark on the front face of the foot.

