



Diamond Mats

- 1) Draw the mat opening on the back of the mat in pencil.

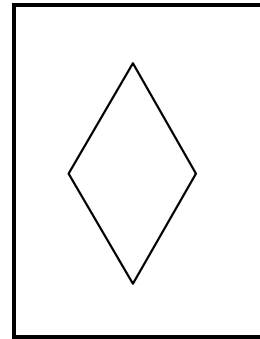

- 2) Place the mat face down at 60 degrees to the right using 30/60 triangles as a support guide. Hold in place with the bottom hold down.
- 3) Set the stops for the bottom cut using the guide marks on the pressure foot. If an odd angle is desired a support guide may be made using matboard.
- 4) Make the bottom cut, then turn the mat end for end and make the opposite cut. If cutting a double or inlayed mat, insert the stop spacers and make these cuts in the second color.

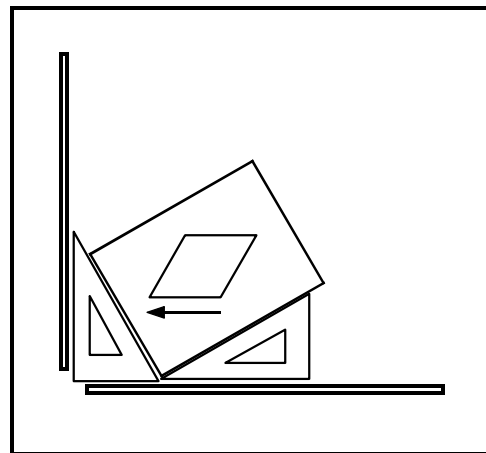

- 5) Reposition the triangles to support the mat at 30 degrees to the right. Hold in place with the bottom hold down.
- 6) Set the stops for the right cut using the guide marks on the pressure foot.
- 7) Make the right cut, then turn the mat end for end and make the opposite cut. If cutting a double or inlayed mat, insert the stop spacers and make these cuts in the second color.

