Oval Cutter Installation

- 1) Remove the rectangular knife head.
- 2) Remove the left hand carriage stops.
- 3) Roll the rectangle carriage off the left end of the tracks.







- 4) Place the top right roller in the upper track and hold in place.
- 5) Press down on the lower right roller and guide it into the bottom track.
- 6) Repeat this process with the left hand rollers.
- 7) Replace the left hand carriage stops.

Positioning Matboard for Oval Cut

- 1) Place the matboard against the left guide.
- 2) Slide the matboard up or down until the bottom edge aligns with 1/2 the height of the matboard on the rule.
- 3) Close the hold down.

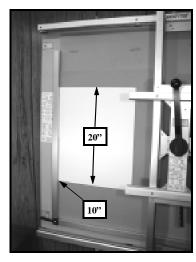

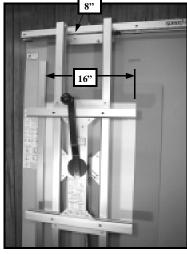

-) Move the oval cutter assembly left or right until the pointer aligns with 1/2 the width of the matboard on the horizontal rule
- 2) Lock the oval cutter assembly in place with all four stops.